



DL39xx SERIES SUPPLEMENTARY INSTALLATION INSTRUCTIONS



Figure 1.

Typical contents for DL39xx series modules

1. Module assembly
2. Float arm
3. Tank seal
4. Harness kit



FIGURE 2.

DL39xx modules all have similar top configuration. Please pay special attention when disconnecting the vehicle fuel lines to make sure that they are reconnected to the correct ports on the new module.



Figure 3.



Figure 4.

Fuel Float arms are sent unattached to prevent damage (Figure 3)

Assemble float arm to fuel level sensor assembly as show above (Figure 4)